
Assmbly Instruction

Wall Diagonal Corner

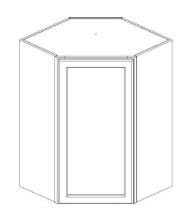

Code	Description	Qty.
Α	Front Side Panel (L/R)	2
В	Rear Side Panel (L/R)	2
С	Front Frame	1
D	Back Panel	1
E	Bottom/Top Panel	2
F	Door	1
G	Shelf	2 or 3
	(Qty. depends on Cabinet height)	
Н	Plastic Shelf Clips	8 or 12
	(Qty. depends on Shelf quantity)	
I I	Hinges	2 or 3
The same	(Qty. depends on Cabinet height)	



For Product lines:

Ice White Shaker/Cambridge White Raised/ Ashton Gray Shaker/Driftwood Gray Raised/Antique White/Rustci Grey


Required Tools:



Step-by-Step Instruction:

Step 1		Step 2	
Lay front frame (C) flat, grooves facing upward (on a soft flat working surface to avoid scratching the face) Slide both front side panels (A) to the grooves	A A	Slide bottom/Top panels (E) into grooves of A and C, secure with Metal Clips	E ↑ A C E ↑
Step 3		Step 4	


Assmbly Instruction






Install rear side panels (B), connectors align to the top panel and bottom panel (E), and front side panels (A)

Secure with Nail Gun to connect font panels (A) and real panels (B)

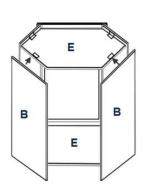


Install back panels (D), connectors align to the top panel and bottom panel (E), and back side panels (B)

Secure with Nail Gun and secure with screws at the upper and botom back panel

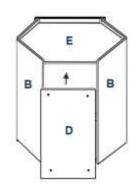

Step 5 Step 6

Insert plastic shelf clips (H) onto pre-drilled holes on side panels (A) and (B)

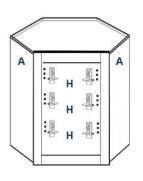

Side in three shelves (G) one by one and make sure the finished front edge facing out

Tips: 2 or 3 shelf board input in the cabinet, then one by one to clip on shelf holders



Step 7

Attache Hinges (I) on the face frame (C), install door (F) onto hinges

